

ADJUSTING PROCEDURE for COMBINATION BEARINGS with ECCENTRIC PIN

- 1 Remove front side screws.
- 2 Turn axial bearing (eccentric axle will be turned)
- 3 Check distance A (if necessary repeat step 2)
- 4 Apply loctite and secure front side screws.

